




NIPPONIA

*Owner's manual*

**E-LEOANCE**

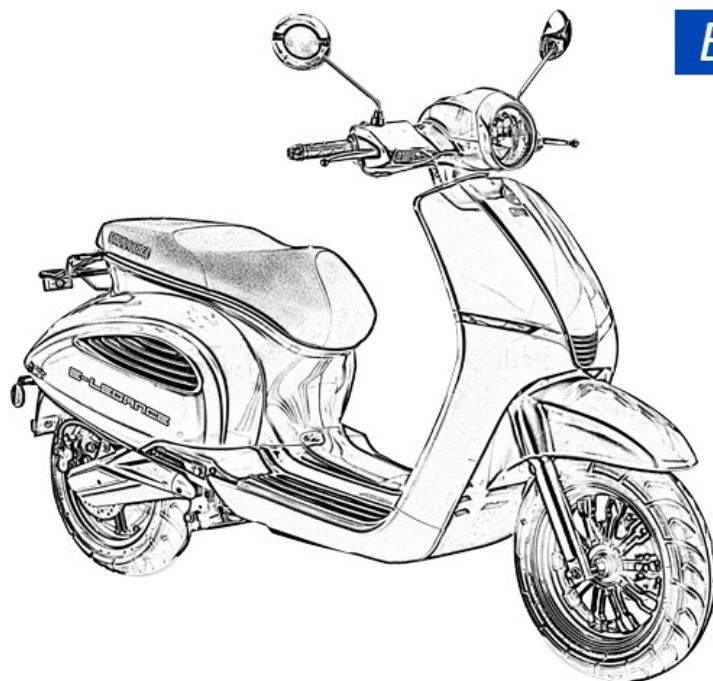

EN

# Owner's Manual

---



**Nipponia S.A.**

# INTRODUCTION

Thank you for purchasing the **NIPPONIA E-LEGANCE** scooter. This model is designed for safety, built for durability and perfected for daily street use.

The superior vehicle design and built-in technology will meet your expectations for an economical and eco-friendly lifestyle.

This Owner's manual contains basic instructions on how to operate, inspect and maintain your scooter. Please read it carefully and thoroughly. Correctly operating, maintaining and repairing your scooter will minimize any possible risks and result in its best performance.

The authorized Nipponia service points will be glad to provide you with more detailed instructions.

Important information contained in this manual is marked using the following symbols:

## WARNING

Important information or instructions. Failure to follow these instructions may result in heavy damage to your scooter, serious injury or even death.


## CAUTION

Important information or instructions. Failure to follow these instructions may result in damage to your scooter or minor injury.

## CAUTION

- This manual is an integral part of the scooter and must always accompany it, even in the event of a resale.
- If you have any questions concerning the contents of this manual or need further information regarding the operation of your scooter, do not hesitate to contact your local Nipponia dealer.
- This booklet is compiled with the latest available information. However, due to constant improvements, modifications or alterations may be made without prior notification. Updated versions can be downloaded from the Nipponia website [www.nipponia.com](http://www.nipponia.com)

**Note: Product and specifications are subject to change without notice.**



Dealer label (stamp) here

# TABLE OF CONTENTS

EN

<b>INTRODUCTION.....</b>	<b>2</b>	Pre-operation check list.....	27	Vehicle identification number (VIN).....	45
<b>IMPORTANT MANUAL INFORMATION.....</b>	<b>3</b>	Activating the motor.....	28	<b>WARRANTY INFORMATION.....</b>	<b>46</b>
<b>TABLE OF CONTENTS.....</b>	<b>5</b>	Acceleration.....	28	<b>MAINTENANCE SCHEDULE.....</b>	<b>47</b>
<b>SAFETY INFORMATION.....</b>	<b>6</b>	Braking.....	29	<b>SERVICE PLAN.....</b>	<b>48</b>
<b>DESCRIPTION OF THE VEHICLE.....</b>	<b>10</b>	Parking.....	30	<b>WIRING DIAGRAM.....</b>	<b>50</b>
Side view.....	10	<b>PERIODIC MAINTENANCE AND MINOR REPAIR.....</b>	<b>31</b>	<b>SPACE FOR NOTES.....</b>	<b>51</b>
Controls and instruments.....	11	Tyres.....	31		
<b>MAIN COMPONENTS.....</b>	<b>11</b>	Tyre wear condition.....	32		
Main switch / steering lock.....	12	Rim and Tyre information.....	33		
Dashboard unit.....	13	Rims.....	33		
Handlebar switches – left.....	16	Brakes.....	34		
Handlebar switches – right.....	17	Brake pads.....	34		
Power switch.....	18	Brake fluid.....	35		
Charger and charging socket.....	19	Lubricating the levers.....	36		
Front brake lever.....	20	Main stand.....	37		
Rear brake lever.....	20	Front fork.....	37		
Seat.....	21	Steering.....	38		
Luggage box, USB socket, sensor light...	22	Wheel bearings.....	38		
Front hook.....	23	Lighting.....	39		
Top case (optional).....	23	<b>TROUBLESHOOTING.....</b>	<b>40</b>		
Side stand.....	23	<b>CLEANING AND STORAGE.....</b>	<b>41</b>		
<b>BATTERY INFORMATION .....</b>	<b>24</b>	Cleaning the vehicle.....	41		
Battery charge.....	24	Storage.....	43		
Battery storage.....	25	<b>SPECIFICATIONS.....</b>	<b>44</b>		
<b>OPERATION AND DRIVING INSTRUCTIONS.....</b>	<b>27</b>	<b>CONSUMER INFORMATION.....</b>	<b>45</b>		

## **Safe riding**

1. Always perform the pre-operation inspection before driving.
2. The scooter should not be used by anyone who does not hold a valid driving license.
3. Many accidents involve motorcycles not seen by other drivers, so please pay attention to the following:
  - Wear brightly-coloured clothes.
  - Do not drive too close to other vehicles or in another driver's blind spot.
  - Avoid overtaking.
4. Always follow local traffic regulations.
  - Driving above the speed limit is the reason for many accidents. Driving speed must not exceed the limit specified by traffic regulations and allowed by road conditions.
  - Always signal when turning or changing lanes in order to attract the attention of the other drivers.
5. Never drive under the influence of alcohol or other drugs; it dramatically increases the risk of accidents.
6. Exercise special attention when driving over crossroads or parking area exits.
7. When driving you must hold the handlebars with both hands and place your feet on the footboard. The passenger should hold the handgrips or the driver and place his feet on the footrests.
8. This scooter is designed for on-road use only. It is not suitable for off-road use.

## **Protective clothing**

1. For your safety, the driver and passenger should both wear helmets. Use of additional safety apparel (gloves, glasses, protective wear) is recommended.
2. Do not wear loose clothing, as it may be caught by the handle levers, the kick starter or the wheels and could lead to an accident.

## Vehicle modifications

Making any modifications to the scooter or replacing the original components can affect its performance and safety and/or render it illegal for use. Observe applicable laws and all national and local regulations concerning vehicle equipment. Additionally, such modifications will cancel the warranty.

## Loading

Adding accessories or cargo to your scooter can adversely affect stability and handling if the weight distribution of the scooter is changed. Use extra care when riding a scooter with extra load. Here are some general guidelines to follow when loading cargo or adding accessories to your scooter:

1. All accessories must be fastened securely on the vehicle in order to minimize vibration that could cause instability.
2. Any extra load should be placed as close to the gravity centre as possible and must be equally distributed on both sides of the scooter to avoid imbalance and instability.
3. The tyre pressure must be adapted to the weight of the load and road conditions.
4. Make sure that any extra load is securely attached to the vehicle to prevent it from falling and being lost.
5. Do not hang any load on the handlebars or the suspension.
6. The total weight of the driver, passenger, accessories and cargo must not exceed the maximum load limit of the scooter (160kg).

**Maximum load: 160 kg**

(Total weight of rider, passenger, cargo and accessories)



## Accessories

When installing accessories not approved by Nipponia, attention should be paid to the following points:

1. The installation of the accessories must not affect the suspension travel, the light position and the steering angle.
2. Avoid installing any accessories that could hinder your access to vehicle controls and movement of your hands and feet as it could impair your reaction in an emergency event.
3. Do not install a bulb with higher power than that specified. It could burn the fuse or cause problems to the electrical system due to low voltage.
4. Do not add a sidecar to the scooter.

## Frame plate




## Side view

1. Mirrors
2. Seat
3. Rear carrier
4. Taillight
5. Rear turn signal light
6. License plate light
7. Motor
8. Main stand
9. Side stand
10. Front disc brake
11. Front turn signal light
12. Headlight
13. VIN



## Controls and instruments

1. Mirrors
2. Dashboard unit
3. Left handlebar switches
4. Right handlebar switches
5. Left grip
6. Throttle grip
7. Main switch
8. USB socket

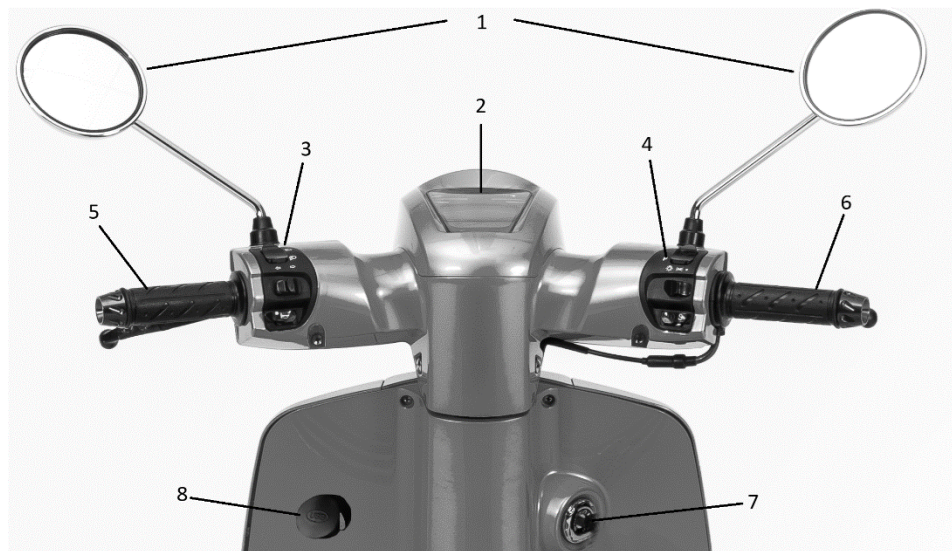


## MAIN SWITCH / STEERING LOCK

The main switch/steering lock controls the ignition and lighting systems and is also used to lock the steering wheel. The switch can be turned to the following positions:

“” - ON

All electrical circuits are supplied with power and the motor is active. The key cannot be removed.

“” - OFF

The motor and the electrical system are off. The key can be removed.

“” - **Steering lock**

The steering is locked and cannot be turned, the motor and the electrical system are off and the key can be removed.



### Lock the steering

1. Turn the handlebar all the way to the left.
2. Press the key down and while pressing, turn to the steering lock position.
3. Remove the key.

### Unlock the steering

Press the key down and while pressing, turn to OFF position.

#### **WARNING**

Never turn the key to OFF or steering lock position, while the vehicle is moving, otherwise the electrical system will be switched off, which may result in loss of control or an accident. Make sure that the vehicle is stopped before turning the key.

## DASHBOARD UNIT



### **READY indicator (1)**

This indicator lights when you press the button on the right switch to release the engine to move forward.

### **Gear indicator (2)**

“0” means mode for 25 km/h or 45 km/h version (depending on countries).

“1” means ECO mode for 45 km/h version (optional).

“2” means mode for 45km/h version.

### **Battery level gauge (3,10)**

The battery level gauge indicates the power remaining before re-charging is required. The same is also indicated with a numerical value expressed in percentage form.

### **Left turn signal indicator lamp (4)**

The left turn signal indicator lamp flashes whenever the turn signal switch is pushed to the left side.

## **Battery charge indicator (5)**

This symbol indicates that the battery is not charging.

## **Battery charge level warning indicator (6)**

This indicator warns you to charge the battery immediately.

## **High beam indicator (7)**

Indicates that the high beam switch is in ON position.

## **Position light indicator (8)**

After the engine has started, the position light is on.

## **Right turn signal indicator lamp (9)**

The right turn signal indicator lamp flashes whenever the turn signal switch is pushed to the right side.









## **Speedometer (11) and odometer (12)**

The dashboard unit is equipped with a speedometer and an odometer. The speedometer shows the riding speed.

The odometer shows the total distance traveled and the trip distance is reset every time the main switch is turned off.

## Dashboard – More indications





1		Reverse (optional)*
2		Parking
3		ODO and TRIP
4		Cruise control system (optional)*
5		Motor error
6		Throttle error
7		Braking system
8		Controller error

\* Depending on countries.



## HANDLEBAR SWITCHES - LEFT



1. Low/High beam switch  

2. Turn signal switch  



3. Horn button 

### Low/High beam switch (1)

Set the switch to position  for the high beam.


Set the switch to position  for the low beam.

### Turn signal switch (2)

Push this switch to  position to signal a left-hand turn or to  position to signal a right-hand turn.

To turn-off the signal lights press the button in the centre of the switch.

### Horn button (3)

Press the button to  position to sound the horn.



## HANDLEBAR SWITCHES - RIGHT

1. Parking switch
2. Blank switch
3. Cruise control button

### Parking “P” switch (1)

After the vehicle is powered on, you need to press the “P” button to move forward.

Then the “Ready” indication on the dashboard disappears and the vehicle will move on normally.

### 2. Blank switch (no use)

This switch is set so that the headlight is always on (in previous versions, this switch functioned as a light switch).

### Speed limit “S” switch (ECO/ NORMAL) (3) – Optional\*


If you press the “S” button, then the “ECO” mode is activated. In this mode the maximum speed of the vehicle is limited to 29 km/h. It can be only activated on the 45km/h version. The indication on the dashboard (gear indicator) turns to “1” from “2”. If you press again the “S” button the mode turns to NORMAL and the gear indicator to “2”.

\* Depending on countries.

## POWER SWITCH

The power switch is installed under the seat area of your vehicle. This switch can shut down the main power supply.


It can be activated to the following positions:

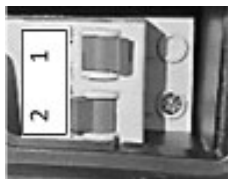

(1)



(2)

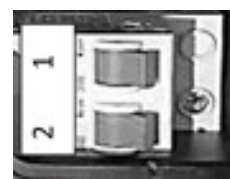

(3)

If you want to activate the main battery (under the seat box), make sure that the switch 2 is in ON position, then the switch 1 will be automatically turned to OFF position, see photo (1).

If you want to activate the optional battery (above the seat box), turn switch 1 to ON position. Switch 2 will be automatically turn to OFF position, see photo (2).


If you want to turn off the power switch of the vehicle, set both switches to OFF position, see photo (3).

### CAUTION

If the electrical system is overloaded, the power switch will act as a circuit breaker to prevent any damage to your vehicle. The two switches can not be both turned to ON position.

## CHARGER AND CHARGING SOCKET

With the vehicle you will also receive a charger to charge the battery of the vehicle. If the battery level indicator on the dashboard unit drops below two dashes, recharge the vehicle as soon as possible.

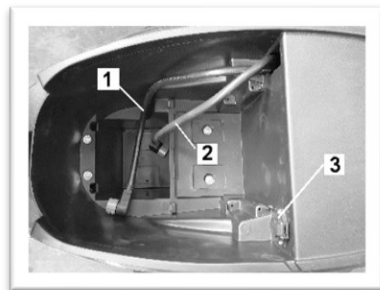


The charging cables (1, 2) and the charging socket (3) are located inside the luggage box. The charging cables are directly connected to the battery. Use the long cable (1) to connect the main battery and the short cable (2) to connect the optional battery.

### **Note:**

Connect the plug of the battery cable (1) to the battery port (2). The connection is correct when you hear the clicking sound. If the connection is not correct, a short-circuit may take place and damage the plug and/or the battery port.




## FRONT BRAKE LEVER

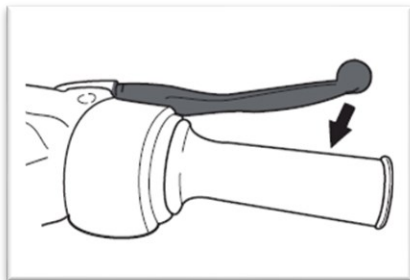

The front brake lever is located on the right handlebar grip.

To apply the front brake, pull this lever towards the grip.


## REAR BRAKE LEVER

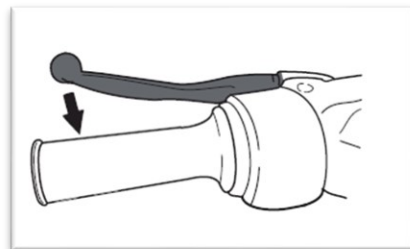

The rear brake lever is located on the left handlebar grip.

To apply the rear brake, pull this lever towards the grip.

## Seat

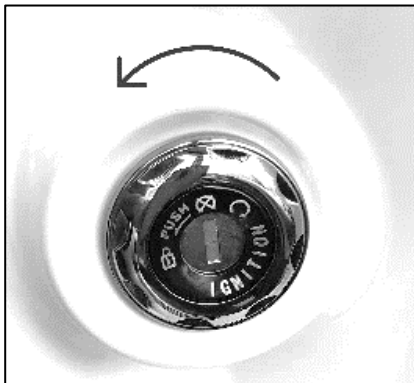

To open the seat, set the vehicle on the side stand or the centre stand. Then press the key down and turn it to the left, to the steering lock symbol.

**CAUTION**

Do not press the key down when turning the key.

To close the seat, lower the seat and push the rear part of the seat until you hear a clicking sound. This indicates that the seat is locked.

**CAUTION**

When you close the seat using force, parts may be damaged.

Always make sure that the seat is securely locked before driving or when you park the vehicle.



## LUGGAGE BOX

The luggage box (1) is located under the seat. Its maximum loading capacity is 5kg. When only the main battery is connected, there is enough storage space.

### CAUTION


The luggage box is heated by the sun. Additionally, it is not entirely waterproof. Do not keep sensitive or valuable items inside the compartment.



## USB socket

The USB socket is located at the left side of the vehicle. Remove the USB cover to use it.

Note: In previous versions, the USB is located inside the luggage box.

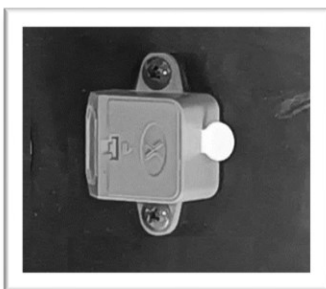

## Sensor light

Under the seat you will find an LED light.

It is a light sensor that is activated by lifting the seat. Do not forget to remove the adhesive tape from the battery for first-time use.

The LED light uses one CR2032 button battery.



## FRONT HOOK, HELMET

Use this hook to hang your helmet or light weight parts.

### CAUTION

Do not exceed the maximum load of 1kg for the front hook.




## TOP CASE (optional)

An optional top case can be fitted on the scooter to store your helmet or other items.

### CAUTION

Do not exceed the maximum load of 10 kg for the rear carrier.

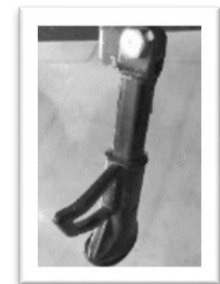

## SIDE STAND

The side stand is located on the left side of the vehicle. Release the side stand by using your foot to step on the bracket of the side stand to set the vehicle in the upright position.

### CAUTION

The side stand retracts automatically when lifted. Make sure that your vehicle is stable enough when it is resting on the side stand. Avoid using the side stand to park the vehicle on slope level or soft ground.



# BATTERY INFORMATION

EN

## BATTERY


This model can carry two **60V 26AH** Li-ion batteries. Only one battery is provided with your purchase of the scooter. An optional one can be used for extended range. The battery is designed to be positioned in vertical arrangement under the luggage box. In order to reach the main battery, you have to remove the battery cover.

### Charging with the battery removed

Charge the battery at a wall outlet by removing it from its compartment. Connect the charger to a 220V wall outlet and then connect the charger to the battery. To unplug the battery from the charger, rotate the blue ring of the connector and pull the plug out.

### On-board charging

1. Open the seat.
2. Set the switch 2 to ON, then automatically switch 1 will turn to OFF, if you want to charge the main battery (see page 18, picture 1) or set switch 2 to OFF and switch 1 to ON, if you want to charge the optional battery (see Page 18, picture 2).
3. Remove the battery cover if you need to reach the main battery.
- 4.1 Using the battery port:
  - Connect the power cable of the charger into a wall outlet.
  - Connect the other side of the power cable of the charger to the battery port.
- 4.2 Using the charging socket:

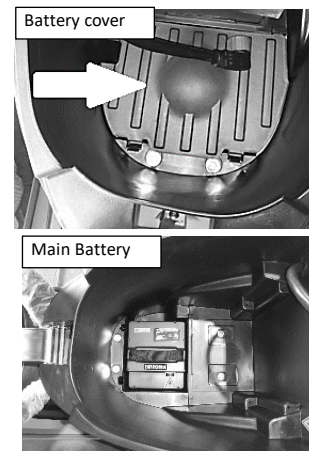

- Connect the batteries to the appropriate battery cable and close the battery cover.
  - Connect the power cable of the charger into a wall outlet.
  - Connect the other side of the power cable of the charger to the charging socket inside the luggage box.
5. While charging, the indicator light on the charger is RED. When the charging is complete the indicator light will turn to GREEN.

## Charge the battery for the first time

When charging the battery for the first time, remove it from the battery compartment.

Connect the charger to a 220V power outlet first and then connect the charger to the battery.

Do a full 100% battery charge for the first time, checking the LED on the charger.

Repeat the same procedure at each charge. The battery will reach full capacity after 4-5 charges.

### CAUTION

- To avoid any damage to the battery, use only the charger provided with your electric scooter.
- Charge the battery frequently and avoid “Deep Discharge”. For maximum battery life, keep the battery level between 20% and 80%.
- Charge the battery for 5-7 hours depending on the frequency of use. Daily charging is recommended to ensure your vehicle has full power and can be used at any time.
- Avoid using your electric scooter when the battery charge indicator is at one dash.
- The scooter includes a safe mode: as the battery discharges, the vehicle’s maximum speed drops in order to help the driver reach his destination. With 9% of battery life remaining, the scooter’s maximum speed will be reduced to 20km/h. It is recommended that you charge the battery before it runs into this reserve.

- The battery is sealed and is NOT user serviceable.

## WARNING

- If the battery overheats (e.g. after long distance), avoid charging it as soon as you arrive – wait at least 15 minutes before connecting it to the charger.
- Li-ion battery can not be charged sufficiently below 0°C. When exposed to cold temperatures, the battery life and efficiency will be reduced by 20-25%. It will return to normal once it has warmed up.

## BATTERY STORAGE

If you do not use your vehicle for a long time, set both power switches to OFF. During this time, the batteries need to be charged once every 3 months up to 60%.

### Storage time and ambient requirements

- Between -20°C and +40°C for a three-month storage period.
- Between -20°C and +25°C for storage periods up to one year.
- Humidity levels between 45% and 75%.

## WARNING

- Storing a battery that is out of charge may cause irreversible damage to the battery.
- Avoid contact with sparks, open flames, cigarettes, etc., and maintain enough ventilation when storing in a confined space.
- **STORE ALL BATTERIES OUT OF REACH OF CHILDREN.**

## Pre-operation inspection

Always perform the pre-operation inspection, before driving your scooter.

It is important that pre-operation checks are carried out each time the vehicle is used. The procedure is simple and enhances the safety of the driver. Failure to do so, may result in vehicle damage or an accident.

If any item in the Pre-operation check list is not functioning properly, have it inspected and repaired before operating the vehicle. If you cannot correct or repair yourself, take the vehicle to your local dealer immediately.

### PRE-OPERATION CHECK LIST

CHECKPOINT	INSPECTION
Throttle grip	<ul style="list-style-type: none"><li>• Make sure that the operation is smooth. It should be able to turn smoothly and be fully opened and closed.</li><li>• If necessary, contact an authorized Nipponia service center.</li></ul>
Wheels and tyres	<ul style="list-style-type: none"><li>• Check tyre condition and wear.</li><li>• Check for any potential damage to the wheels or tyres.</li><li>• Inspect the air pressure of the tyre and adjust if necessary.</li></ul>
Brake levers	<ul style="list-style-type: none"><li>• Make sure that operation is smooth.</li><li>• Lubricate the lever joints if necessary.</li></ul>
Side stand	<ul style="list-style-type: none"><li>• Make sure that operation is smooth.</li><li>• Lubricate pivot if necessary.</li></ul>
Instruments, lights, signals and switches	<ul style="list-style-type: none"><li>• Check operation.</li><li>• If necessary, contact an authorized Nipponia service center.</li></ul>

Note: if you need assistance on how to perform any of the above -mentioned tasks, do not hesitate to contact an authorized Nipponia service center.

## WARNING

Before riding the vehicle, please make sure that you are fully familiar with all operating controls & their functions. Consult your local Nipponia dealer if you need more assistance.

## ACTIVATING THE MOTOR

1. Turn the main switch to the ON position to activate the motor.
2. Push the vehicle off the main stand.
3. Keep at least one foot to the ground to support the scooter.
4. Adjust the rear-view mirrors.
5. Press the “P” button to move forward.
6. Before taking off, turn on the signal light and make sure it is safe to go.

## ACCELERATION

There is a function that can alternate between soft and hard acceleration.

### To set soft acceleration:

1. Hold the left brake lever when the scooter is powered off.
2. Turn the ignition key on, meanwhile keeping the left brake lever pressed.
3. Rotate the throttle grip all the way 5 times in 5 seconds, while keeping the left brake lever pressed.
4. Release brake lever. Soft acceleration has been set.

## To set hard acceleration:

While in soft acceleration mode, rotate the throttle grip fully 6 times and your vehicle will revert to hard acceleration mode.

## BRAKING

When you need to brake:

1. Close the throttle completely.
2. Apply both front and rear brakes simultaneously while gradually increasing the pressure.

### WARNING

- Avoid braking while turning, otherwise the vehicle may skid or fall.
- When driving on a wet or slippery road the braking distance is longer than usual. Reduce the driving speed and brake in advance or you may lose balance and fall.
- Braking is more difficult on a wet road or on a downhill. Use both brakes alternatively, maintaining a low speed.

## PARKING

When parking:

1. Switch on the turn signal light in advance and check for approaching vehicles.
2. Close the throttle grip and apply the brakes slowly, so the brake light will turn on and warn vehicles from behind.
3. When the vehicle stops, switch off the turn signal light.
4. Turn the main switch to OFF position to turn off the motor.
5. Rest the scooter on the main stand.
6. To prevent from theft, always lock the steering when parking and remove the key from the main switch.

## WARNING

- Park the scooter on a flat and stable surface to prevent it from falling.
- When you park on a slope, position the scooter facing upwards to prevent it from falling.
- Avoid parking on a slope or soft ground, as the vehicle may fall.

## CAUTION

The condition and the good operation of your scooter depends on how frequently you perform the correct maintenance, periodic inspection, adjustment and lubrication. The following instructions will help you to keep your vehicle in a good condition.

## WARNING

- If you are not familiar with the maintenance work, contact with your local Nipponia dealer.
- Maintenance, replacement or repair may be performed by an authorized Nipponia service point.
- Making any modifications to the scooter or replacing the original components can affect its performance and safety and even make it illegal for use. Modifications will also cancel the warranty.

## TYRES

To maximize the performance, durability and safe operation of your vehicle, always check the tyre pressure. Cracks, damage and wear on the tyres cause unsteady steering or even tyre blow-out. Note that the tyre pressure is measured with cold tyres, ideally when the temperature of the tyres equals the ambient temperature.

### Tyre pressure

The tyre pressure must be checked and, if necessary, regulated before each ride, according to the following table:

<p><b>Tyre pressure in cold state</b> <b>Front: 2.5 bar</b> <b>Rear: 2.5 bar</b></p>
--

### WARNING

The tyre pressure must be adjusted in accordance with the riding condition (rider, passenger, cargo, accessories) and the road condition.



## Tyre wear condition



Check the tread wear indicator (1) which is a triangle imprinted on the side of the tire. It points to a line of rubber that is built into the tyre that runs across the tread (2). If you notice this line is in the same level with the top of the tread grooves, you will need to replace the tire. If you are not familiar to this, please ask your local Nipponia dealer to help you.

### WARNING

- Do not overload your vehicle, since it will increase pressure on the tyres, affect braking and steering and may cause damage or even lead to an accident.
- Make sure that extra load is securely attached to the vehicle and distribute the weight evenly from side to side to prevent it from falling and being lost.

### WARNING

- The tyres must be checked before each ride. If a tyre tread shows crosswise lines (minimum tread depth) or has a nail or glass fragments in it or if the sidewall is cracked, replace the tyre immediately.
- Have a dealer replace the tyres, especially the rear one as the electric motor is mounted on the rear wheel.

## Rim and Tyre information

Rim and tyre dimensions are shown in the following table:

Front -> Rim: 3.5 x12" Tyre: 120/70-12"

Rear -> Rim: 3.5 x12" Tyre: 120/70-12"

Type: tubeless

## Rims

The rims must be checked before each ride. If any damage is observed, then replace the rim immediately. Do not attempt even the minimum repair to the wheel. A deformed or cracked wheel must be replaced. Given the fact that the electric motor is mounted on the rear wheel, any damage, deformation or crack may be dangerous for the vehicle's balance.

### CAUTION

- The wheel should be balanced when the tyre or rim has been changed or replaced. An unbalanced wheel may result in poor performance, adverse handling characteristics and a shortened tyre life.
- After changing a tyre, drive at medium speeds until the tyre is broken-in, in order to get some traction.

## BRAKES

The scooter is equipped with hydraulic disk type front and rear brake. Periodic maintenance and adjustment of the braking system should be performed to prevent accidents.


### Front/Rear brake

#### CAUTION

There should be no free play at the brake lever end. If there is free play, contact your Nipponia local dealer.

#### ⚠ WARNING

A soft or spongy feeling in the brake lever can indicate the presence of air in the hydraulic system. If there is air in the hydraulic system, have a dealer bleed the system before operating the motorcycle. Air in the hydraulic system will diminish the braking performance, which may result in loss of control and an accident.

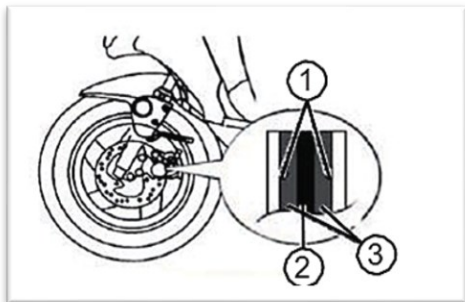

### BRAKE PADS

The front and rear brake pads must be checked for wear at the intervals specified in the periodic maintenance and lubrication chart.

1. Wear indicator
2. Brake disc
3. Brake pad

## Front and rear brake pads

Each front brake pad is provided with wear indicators, which allows you to check the brake pad wear without having to disassemble the brake. To check the brake pad wear, check the position of the wear indicators while applying the brake. If a brake pad has worn to the point that a wear indicator almost touches the brake disc, have a dealer replace the brake pads as a set.

## BRAKE FLUID

### WARNING

Insufficient brake fluid may allow air to enter the brake system, possibly causing it to become ineffective. The brake fluid level must be checked at the intervals specified in the periodic maintenance and lubrication chart.

Low position brake fluid level may indicate worn brake pads and/or brake system leakage. If the brake fluid level is low, be sure to check the brake pads for wear and the brake system for leakage. When checking the fluid level, make sure that the top of the master cylinder is level by turning the handlebars. Use only the recommended quality brake fluid, otherwise the rubber seals may deteriorate, causing leakage and poor braking performance.

Recommended brake fluid:  
Brake Fluid DOT4

## CAUTION

- It is suggested to use the same type of brake fluid. Mixing fluids may result in a harmful chemical reaction and lead to poor braking performance.
- Be careful that water does not enter the master cylinder when refilling. Water will significantly lower the boiling point of the fluid and may result in vapor lock.
- Brake fluid may deteriorate painted surfaces or plastic parts. Always clean up spilled fluid immediately.
- As the brake pads wear, it is normal for the brake fluid level to gradually go down. However, if the brake fluid level goes down suddenly, have a dealer check.

## Changing the brake fluid


### ⚠ WARNING

Have a dealer change the brake fluid at the intervals specified in the periodic maintenance and lubrication chart.


## Lubricating the levers

The pivoting points of the front and rear brake levers must be lubricated at the intervals specified in the periodic maintenance and lubrication chart.

**Front brake lever**

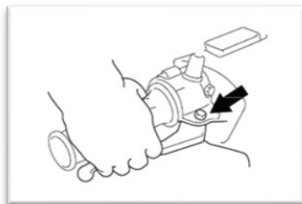

**Rear brake lever**

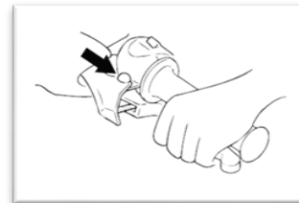

## MAIN STAND

### CAUTION

The operation of the main stand should be checked before each ride, and the pivots and metal-to-metal contact surfaces should be lubricated, if necessary.

### ⚠ WARNING

If the main stand does not move up and down smoothly, have a dealer check or repair it.

## FRONT FORK

The condition and operation of the front fork must be checked as follows at the intervals specified in the periodic maintenance and lubrication chart.

### ⚠ WARNING

Securely support the motorcycle so that there is no danger of it falling over.

1. Place the vehicle flat and upright.
2. Check the inner tubes for scratches, damage and oil leakage.
3. Apply the front brake and push the handlebars several times down hard to verify the suspension of the fork.

### ⚠ WARNING

When damage to the fork is noted, please contact your dealer.

If you treat the telescopic fork with cleaning agents, make sure that they do not come into contact with the tyres or the brakes. This can lead to dangerous accidents.

## STEERING

### **WARNING**

Worn or loose steering bearings may cause danger. Therefore, the operation of the steering must be checked as follows at the intervals specified in the periodic maintenance and lubrication chart.

1. Place the vehicle on the center stand/suitable motorcycle stand to raise the front wheel of the ground.
2. Hold the lower ends of the front fork legs and try to move them forward and backward.
3. If any free play can be felt, have a dealer check or repair the steering.

## WHEEL BEARINGS

The front and rear wheel bearings must be checked at the intervals specified in the periodic maintenance and lubrication chart.

### **CAUTION**

If there is free play in the wheel hub or if the wheel does not turn smoothly, have a dealer check the wheel bearings.

## LIGHTING

This model is equipped with a daytime running light.



### Headlight bulb

This model is equipped with halogen bulb headlight. If a headlight bulb burns out, have a dealer replace it.

### Taillight, license light and indicators



If the taillight (1), the turn signal light bulbs (2) or the license light (3) do not operate, replace the bulb or have a dealer check its electrical circuit.



## TROUBLESHOOTING

Although the vehicles receive a thorough inspection before shipment from the factory and again prior to delivery to you, trouble may occur during operation. However, should your vehicle require any repair, take it to a dealer, whose skilled technicians have the necessary tools, experience, and knowhow to service the vehicle properly.

Use only genuine replacement parts. Imitation parts may look like parts, but they are often inferior have a shorter service life and can lead to expensive repair bills.

See below a few common cases:

No.	Trouble	Cause	Repair
1	Turn on ignition, no indication	Power switch is in "OFF" position	Turn to "ON" position
		Loose battery wiring	Check wiring and tighten
2	Indicator lamps function but the electric motor does not start	Not sufficient battery charge	Recharge batteries
		Accelerator throttle loose, frayed or disconnected.	Take your motorcycle to an authorised workshop
		Wiring problem in circuit or charger malfunction.	Take your motorcycle to an authorised workshop
3	After charging, shortened travel distance	Tyres are under-inflated	Inflate the tyres to correct pressure
		Insufficient charging time	Recharge batteries
		Charger trouble	Contact dealer
		Battery age or deterioration	Replace battery

## CLEANING THE VEHICLE

Maintaining the vehicle clean, apart from keeping it attractive, will extend its lifespan and optimize performance.

### Before cleaning

Close all caps, covers, electrical connectors that are well install, so water can be avoided to get into. Remove the batteries, while you do the cleaning job.

#### **WARNING**

- Please take notice that all functions of your scooter are based on electricity. Failure to seal all appropriate components as described before washing can lead to serious damage.
- Avoid too much pressure while washing the rear wheel, as it includes the electric motor.

#### **CAUTION**

- Do not use acid-based cleaners. If such funds used for stubborn stains, so use this only occasionally, dry it immediately after and then apply a corrosion protection spray.
- Always follow the manufacturer 's instructions on care and cleaning agents.
- Use best only water and mild detergent or special cleaner from the dealer to the sensitive components of the vehicle to prevent damage. Dry the plastic parts then wipe with a soft, dry cloth or sponge.
- Protect particularly plastic parts, paint, headlight glass from harsh chemicals such as fuel, rust remover, brake cleaner or similar. The use of such agents may result in malfunction, damage and affect the security itself.
- Do not use a high-pressure washer or steam cleaner, causing water in storage can penetrate electrical components such as connectors or switches, lighting, and brake linings or damage, seals, paint and other surfaces.

## **Cleaning after normal use**

Remove dirt with warm water, a mild detergent, and a soft, clean sponge, and then rinse thoroughly with clean water. Use a toothbrush or bottlebrush for hard-to-reach areas.

## **Cleaning after riding in the rain, near the sea or on salt-sprayed roads**

### **CAUTION**

Since sea salt or salt sprayed on the roads during winter are extremely corrosive in combination with water, carry out the following steps after each ride:

- Clean the vehicle with warm water and a mild detergent.
- Do not use hot water, which increases the corrosive effect of the salt.
- Apply a corrosion protection spray on all metal, including chrome- and nickel-plated, surfaces to prevent corrosion.

## **After cleaning**

- Dry the vehicle.
- Wax all painted surfaces.

### **⚠ WARNING**

- Make sure that there is no oil or wax on the brakes or tyres.
- If necessary, clean the brake discs and brake linings with a regular brake disc cleaner and wash the tyres with warm water and a mild detergent.
- Before operating the vehicle, test the braking performance and tyres.

## STORAGE

### Short-term (for a few days)

- Always store your vehicle in a cool, dry place and protect it against dust with a vehicle cover.

#### WARNING

Store the vehicle in a well air flow room with dry air if possible. A place with humidity will cause rust.

### Long-term (for weeks)

- Clean the vehicle.
- Lubricate all control cables and the pivoting points of all levers and pedals as well as of the side stand/ main stand.
- Check and, if necessary, correct the tyre air pressure, and then lift the vehicle so that both of its wheels are off the ground. Alternatively, turn the wheels a little every month in order to prevent the tyres from becoming degraded in one spot.
- If you do not use the vehicle for a long time, set both power switches to OFF position. Remove the batteries and store them in a dry place with temperatures between 25°C and 45°C for optimal function. During this time, the batteries need to be charged once every three months up to 60%.

## SPECIFICATIONS

Motor	Wheel Hub type, 3000W BOSCH®
Max. Range (1 battery)	55 km (59 km)
Maximum speed (km/h)	45 (25)
Maximum Torque	72 Nm @ 400 rpm (51 Nm @ 190 rpm)
Maximum Power	3.0 kW @ 400 rpm (1.0 kW @ 190 rpm)
Battery	Li-ion 60V-26Ah
Full Charge Time	5 hours
Seat height (mm)	795
Overall Size (LxWxH) mm	1950 x 705 x 1155
Maximum Load (kg)	160
Front/rear brake	DISC
Front/rear tyre	120/70-12
Wheelbase (mm)	1410
Weight	78 kg
Gradeability Capacity	15 degrees
Lights	Front headlamp 12V35W, Direction indicator lamp 12V5W, Taillight 12V21W, Instrument panel lamp 12V1.7W.

## VEHICLE IDENTIFICATION NUMBER (VIN)

Please write down the VIN (vehicle identification number) to order spare parts or in case the vehicle is stolen.

VIN is stamped into the frame. To see the VIN, lift the rubber on the footrest floor.



### CAUTION

VIN is used to identify your motorcycle and may be used to register your vehicle with the licensing authority in your area.

Note:

The VIN can be also seen on the frame plate of your vehicle.

Please read carefully the instruction manual of your vehicle before operating it in order to make yourself familiar with its handling. We explicitly point out that the instruction, maintenance, and care instructions given in the user's manual have to be complied with, in order to sustain your claims towards warranty. Only the strict compliance with the customer specifications stated in the user's manual ensures the prolonging of the natural life of your vehicle.

For more details regarding the warranty information, you may visit [www.nipponia.com](http://www.nipponia.com).

# MAINTENANCE SCHEDULE

EN

*The Warranty can be granted only if the vehicle has been serviced in accordance with this maintenance schedule.*

The inspection intervals are required, otherwise, no warranty can be granted.		1000 km	Every 3000 km	Every 6000 km	Every 10000 km
PART	TO DO				
Common check (refer to page 27)	Inspect	I	I		
Throttle and grip	Inspect	I		I	
Fittings, buttons and seals	Inspect / adjust	I/A		I/A	
Front and rear brake pumps	Inspect	I		I	
Front and rear suspension system	Inspect	I		I	
Wires and connectors	Inspect	I		I	
Bearing of front and rear wheels	Inspect / replace	I		R	
Tyre condition	Adjust / clean	A/C	A/C		
Controller	Clean	C		C	
Charger	Clean	C		C	
Bearing of front fork	Adjust / clean	A/C		A/C	
Brake assembly - Lubrication	Replace	I		R	R
Brake fluid - Lubrication	Replace	I			
Suspending system - Lubrication	Inspect	I		I	
Battery terminal - Lubrication	Inspect	I		I	
Bearing of front fork - Lubrication	Inspect	I		I	
A - ADJUST / C - CLEAN / I - INSPECT (Inspect or Clean or Lubricate or Replace, if necessary) / R - REPLACE					



# SERVICE PLAN

EN

*The Warranty can be granted only if the vehicle has been serviced in accordance with this service plan.*

<p>1000 km</p> <p>Stamp / Signature</p>	<p>3000 km</p> <p>Stamp / Signature</p>
<p>6000 km</p> <p>Stamp / Signature</p>	<p>9000 km</p> <p>Stamp / Signature</p>

VEHICLE IDENTIFICATION NUMBER: \_\_\_\_\_ NAME OF THE CUSTOMER: \_\_\_\_\_

MODEL: \_\_\_\_\_ SIGNATURE OF THE CUSTOMER: \_\_\_\_\_



# SERVICE PLAN

EN

*The warranty can be granted only if the vehicle has been serviced in accordance with this service plan.*

<p>12000 km</p> <p>Stamp / Signature</p>	<p>15000 km</p> <p>Stamp / Signature</p>
<p>18000 km</p> <p>Stamp / Signature</p>	<p>21000 km</p> <p>Stamp / Signature</p>


VEHICLE IDENTIFICATION NUMBER: \_\_\_\_\_ NAME OF THE CUSTOMER: \_\_\_\_\_

MODEL: \_\_\_\_\_ SIGNATURE OF THE CUSTOMER: \_\_\_\_\_



# WIRING DIAGRAM

EN

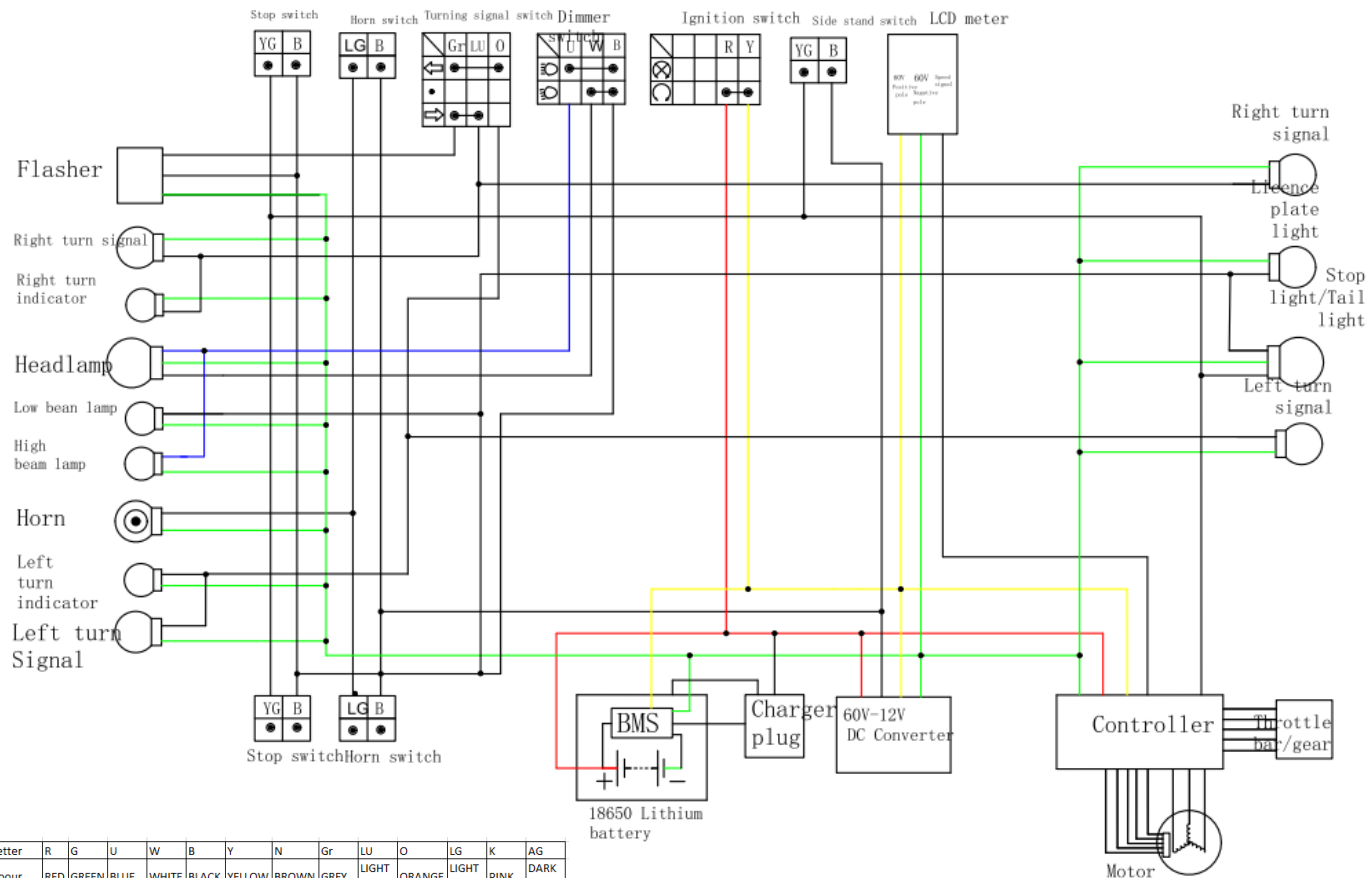

## SPACE FOR NOTES

EN

**NIPPONIA S.A.**  
**a:** 12, Agias Fotinis str.  
Nea Smyrni, 17121 Athens, Greece  
**e:** [hq@nipponia.com](mailto:hq@nipponia.com)  
**t:** +30 210 9328800  
**w:** [www.nipponia.com](http://www.nipponia.com)

**EUROPEAN DISTRIBUTION CENTER**  
**TRADE & TRAFFIC PLUS B.V.**  
**a:** Prins Mauritslaan 5a, 8091 AJ Wezep, The Netherlands  
**e:** [info@trade-traffic.com](mailto:info@trade-traffic.com)  
**t:** +31 (0) 38-4533222  
**w:** [www.trade-traffic.com](http://www.trade-traffic.com)



**SCAN ME**

**DISTRIBUTOR FOR FRANCE**  
**ECCITY MOTORCYCLES**  
**a:** ZI du carré, 47 route de la Marigarde  
06130, Grasse, France  
**e:** [commercial@eccity-motocycles.com](mailto:commercial@eccity-motocycles.com)  
**t:** +334 22 13 01 89  
**w:** [www.eccity-motocycles.com](http://www.eccity-motocycles.com)

**DISTRIBUTOR FOR BELGIUM**  
**BVBA BIKE DESIGN**  
**a:** Vriesenrot 14,  
B-9200 Dendermonde, Belgium  
**f:** +32 52 45 33 71  
**t:** +32 52 45 33 61  
**w:** [www.bike-design.com](http://www.bike-design.com)

**v. 09.22**